

● **BLUeBerry**



**USER MANUAL**

I Foreword .....	2
II Precautions .....	2
III Overview of the Product .....	3
IV Basic Operation .....	4
V Instruction to Operation .....	4
VI Troubleshooting .....	11
VII Charging .....	12
VIII Specifications .....	12

## I Foreword

First, thank you for your choosing our digital DV product!

This product is a new generation of digital product, with perfect audio and video functions and high reliability covering dedicate appearance. It support video formats as RM/RMVB、AVI、FLV、3GP、MPG、DAT、VOB、MP4、MOV、ASF、WMV and audio format as APE、FLAC、MP3、WMA、WAV. It is also support games, E-book, pictures, FM, record and FLASH playing.

Be sure to read this manual carefully before use. After read it, please put it away for reference in the future.

In order to improve, the contents of this manual may be changed. It will not be notified any changes subject to performance and functions. In event of unconformity between the actual setup or use and this user's manual, the actual product will prevail, or please login on our website for updated information.

- ◆ This model comprises various appearances. Otherwise, the specific type is subject to the actual product.
- ◆ This model comprises various menu interfaces but the functions are the same and subject to the illustration and demonstration of the product.
- ◆ In event of the "Menu" icon present in this manual, please refer to the instructions above.

## II Precautions

Please pay attention to the following items before use:

- (1) Do not use this product at extreme temperatures or in dusty or moist environment;
- (2) Do not expose this product directly in the sun (e.g. in vehicle at open place or at beach etc);
- (3) Do not impact this product to hard object. Otherwise, it will result in attrition on its surface or damage to its components;

- (4) Please be sure the power is off before plug in or out the SD card, so as to avoid unpredicted damage to the product resulting from the surge of current;
- (5) Please place it out of the reach of children, avoiding sever damage resulting from falling or impact of sharp object;
- (6) Please charge the battery in event of the following:
  - A The block of power indicator is empty and flickers.
  - B The system is power off automatically, and it is the same after restart it.
- (7) Avoid using this product in extreme dry environment as much as possible, so as to prevent static.
- (8) Do not sudden disconnect the cable during formatting, or uploading or downloading files. Otherwise, it may result in error of the program.
- (9) When use it as a movable hard disc, please make sure to follow the proper operation of file management to export the file, and back up the important data as well. Our company will not be liable for any loss of file resulted from false operations.
- (10) This product comprises high precise components, thus please do not remove or dissemble by yourself. As it only allows dedicated charger for this product, please make sure to take care of the charger and avoid charging the product during playing.
- (11) When the user download video, image and music files, please be sure to follow the instructions of "Enter to U-disc Mode" to store the file. Otherwise, it may result in failure of playing.

## III Overview of the Product

1. Picture browses function, support JPG,GIF,BMP,
2. E-book function: support TXT format
3. Video function: support AVI, FLV.(320x240)
4. Audio function: support MP3,WMA,OGG, AAC,APE ,FLAC,WAV

5. Built-in lithium battery
6. USB interface:2.0
7. Voice recording function
8. Support WIN98SE/ME, WIN2000, WIN XP SYSTEM

## IV Basic Operation

1. **OPEN:** Push the POWER key to ON, then press and hold PLAY key.
2. **CLOSE:** Push the POWER key to OFF.

## V Instruction to Operation

### 1. Music model

Choose MUSIC icon in the main menu, press M key to start music playing.

Operation of keys: press LEFT and RIGHT key select the prev and the next one, press and hold LEFT and RIGHT key for backwards and forwards fastly.

Press VOL key then press RIGHT and LEFT key to adjust the volume.

Press PLAY key to pause.

When it is playing music, press M key for list, press and hold M key to return the main menu.

Instructions of functions:

1. Adjust volume: Press VOL key then press RIGHT and LEFT key to adjust the volume.
  2. Play list: Press M key to enter play list.
3. EQ setting: Press and hold M key to return the main menu, then choose settings icon, choose music item, after that you can set EQ models. There are 7 options.
  4. Lyric.


5. A-B repeat: press and hold VOL key when it is playing music to set A-B repeat, A is starting point, press and hold VOL key again for stop point B, it will repeat between A and B, press and hold VOL key again to stop,

### 2. Video model


Select VIDEO icon in the main menu, press M key to enter.

Instructions of functions:

1. Press and hold LEFT and RIGHT key for backwards and forwards fastly.
2. Adjust volume: Press VOL key then press RIGHT and LEFT key to adjust the volume.

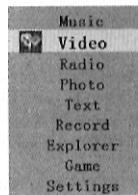

### 3. Radio

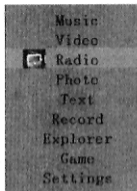

Choose RADIO icon in the main menu, press M key to enter the sub-menu.


1. Manual: press M key to confirm manual, press LEFT and RIGHT key to search.
2. Preset: press M key to confirm PRESET, press LEFT and RIGHT key to select.
3. MEM: press M key to confirm MEM, press LEFT and RIGHT key to select the channel you want to keep, press M key to confirm.
4. Delete, press M key to confirm DELETE, press LEFT and RIGHT key to select the channel you want to delete, press M key to confirm.
5. Search: press M key to search and keep the channels, and when it finish searching, it will come to the last channel, press LEFT and RIGHT key to stop.
6. Adjust volume: press VOL key first, then press RIGHT and LEFT key to adjust the volume.

### 4. Photo



1. Select PHOTO icon in the main menu, then press M key to enter.
2. Operation of keys: press LEFT and RIGHT key to choose file, after you select the picture, press M key to browse it. Press M key to return, then press and hold M key to return the main menu.

### 5. E-BOOK

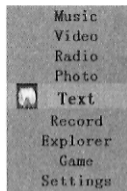


Select TEXT key in the main menu, then press M key to enter.

Operation of keys: press LEFT and RIGHT keys to select file, press M key to open the file after you choose it, press M key again to return.

1. Press and hold LEFT or RIGHT key for the prev page or the next page, press LEFT or RIGHT key for the prev line or the next line,
2. Press and hold VOL for bookmark, press LEFT and RIGHT key to select, then press M key to confirm and exit.


#### 6. RECORD

Select RECORD icon in the main menu, press M key to enter.

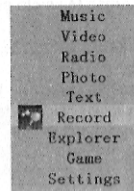

1. Press PLAY key to start.
2. Press PLAY key again to pause, press and hold PLAY key to keep the file you record and prepare for the next one.
3. Play the file you record just now: Select the EXPLORER icon, press M key to enter the VOICE folder, press LEFT and RIGHT key to select file, then press M key to play.


#### 7. EXPLORER

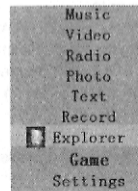

Select the explorer icon in the main menu, press M key to enter, then you can see the list, press VOL key to return.

1. Select file: press LEFT and RIGHT key to select file, press M key to play, press and hold M key to return the main menu.
2. Delete file: When you need to delete file, select the file first, then press PLAY key, after that, press RIGHT and LEFT key to select and press M key to confirm.

#### 8. Games

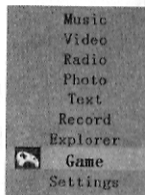


Select GAME icon in the main menu, press M key to enter.

Key operation: press M key to enter GAME menu, choose GAME START, press M key to enter, press PLAY key to pause, press RIGHT and LEFT key to continue or exit, press M key to confirm. Press RIGHT and LEFT KEY to move rightwards or leftwards, VOL key to move upwards. Choose EXIT GAME, press M key to confirm to exit the game. Press and hold M key to return the main menu.

#### 9. Setting

Select SETTING icon in the main menu, press M key to enter, press LEFT and RIGHT key to select, then press M key to enter.

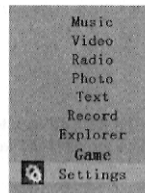

1. Music setting: there are five options: REPEAT MODE, PLAY MODE, EQ SELECT, MS PLAYFX, USER EQ SET.
2. Radio: there are two options: Stereo Switch and FM region
3. Record: there are two options: REC quality and REC volume
4. Display: there are three options: Blight time, lum and blight mode.
5. Auto play set
6. System set: language, about and update.
7. Power off time
8. Default set.

## VI Troubleshooting

1. Failure to start: A. No power in batter, please charge the lithium battery immediately; B. connect with the charger and check again.
2. You can't hear voice by earphone: A. check if the volume is 0. B. check the earphone.
3. Noisy: A. check the earphone, B. check the music file, if it was damaged, it will be noisy.

4. Can't download file: A. check the connection, B, check if there is no room for new file, C.check the USB cable.

## VII Charging

There are two ways for charging:

1. There USB cable, connect the unit with PC, push the ON/OFF key to ON.
2. Use charger: connect the unit with the charger, push the ON/OFF key to ON.

## VIII Specifications

Size	86mm*46mm*7mm	
Weight	App. 52 g	
Screen	2.4 inched TFT LCD screen	
USB interface	USB2.0	
Voice recording	Format	WAV
Photo format	JPG;	
Video format	AVI	
Music format	MP3/WMA	
E-book	TXT	
Image format	JPG, BMP	
Working temperature	-5 - +40 °C	

**Note: The specification is subject to change without further notice.**